


36E Door Spring Assembly Removal and Replacement

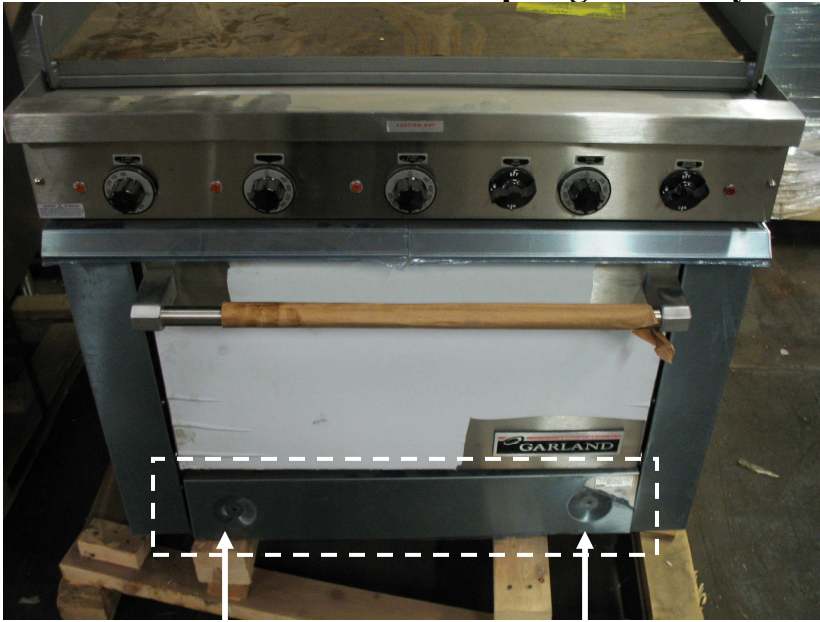


Remove the kick panel




Remove the Left Drip Tray




Remove the 2 Screws visible with the door open

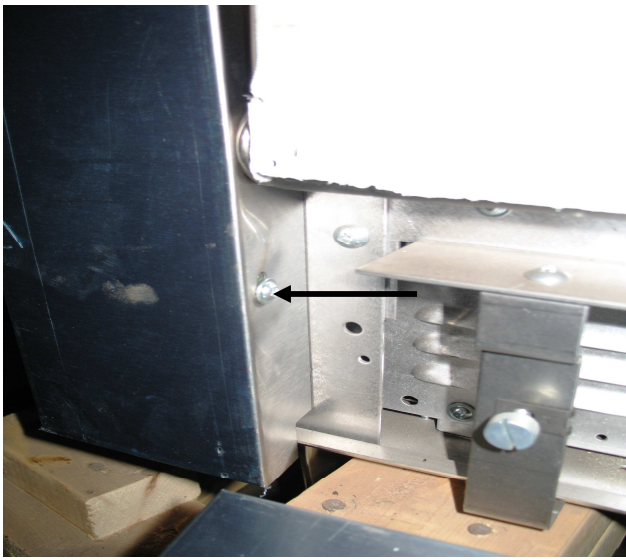


Remove the Screw visible with the Kick Panel removed

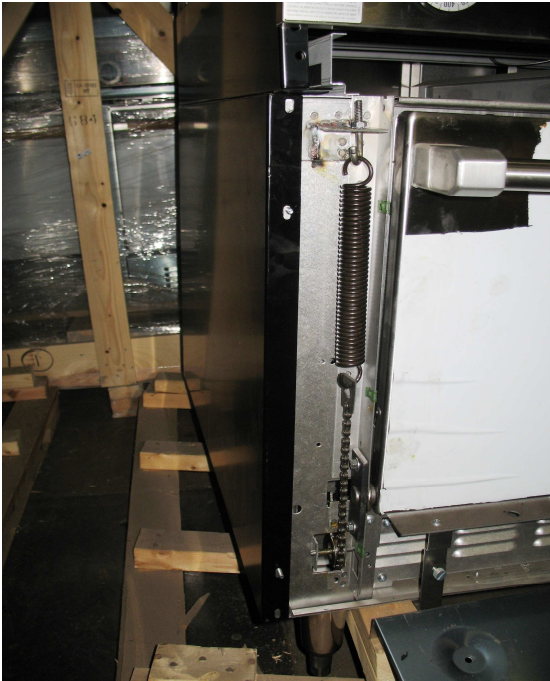


Remove the Cover to reveal the Spring Assembly

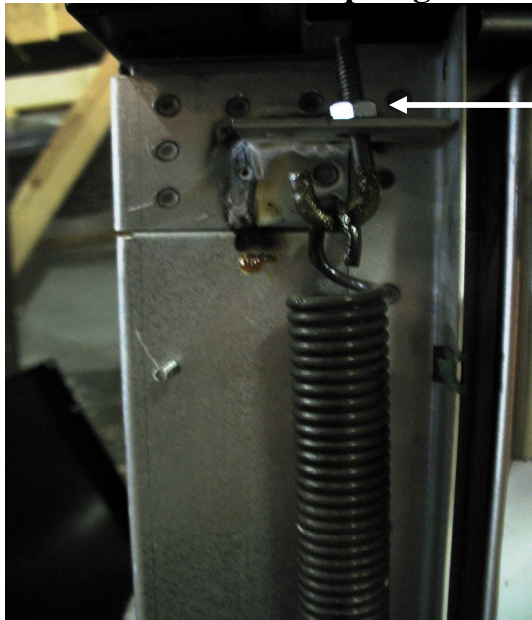

**Loosen the J-Bolt Nut to free the Spring
(Note: The door will need supported as the spring is loosened)**

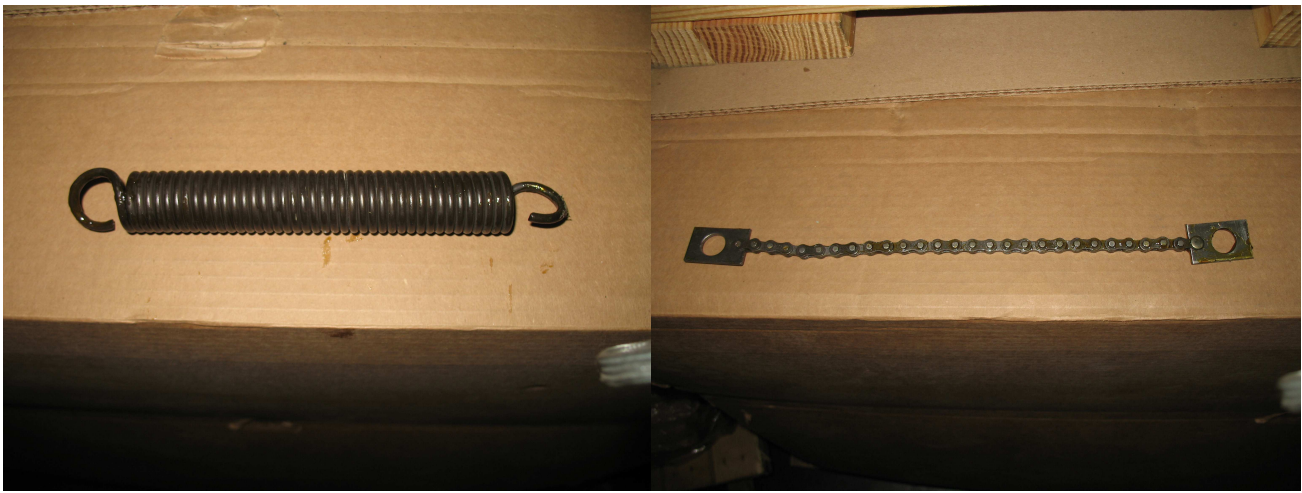

Once free the Spring and Chain can be separated

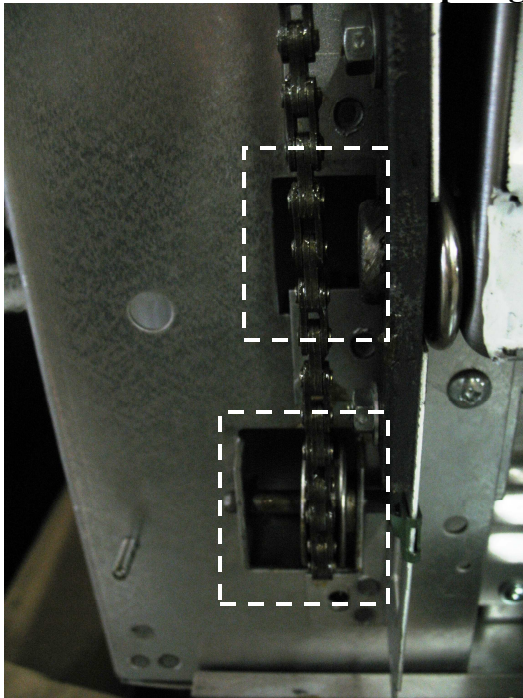

Using the Upper and Lower holes the Chain can be re-hooked to the Pivot Bolt (P#-F299), while opening the door to raise the Pivot Bolt. Then installation is the reverse or removal.



Due to the spot welded box at the back of the spring assembly, the procedure above is recommended for Spring Assembly repairs rather than accessing the Box Pictured above. (The Spring Assembly Box is accessed by removing the 2 Screws at the rear of the side panel and pulling out and forward after the front panel is removed)