

NEW RANGE – ADJUSTABLE CASTER – How to Adjust

1) Un-tighten set screws

2) Screw “casing” up or down to adjust height as required



3) Re-tighten set screws