


## MCO Door Cam Guide

With the doors closed, the cam should appear as shown below. The door switches should not be activated and the set screws should be tight.

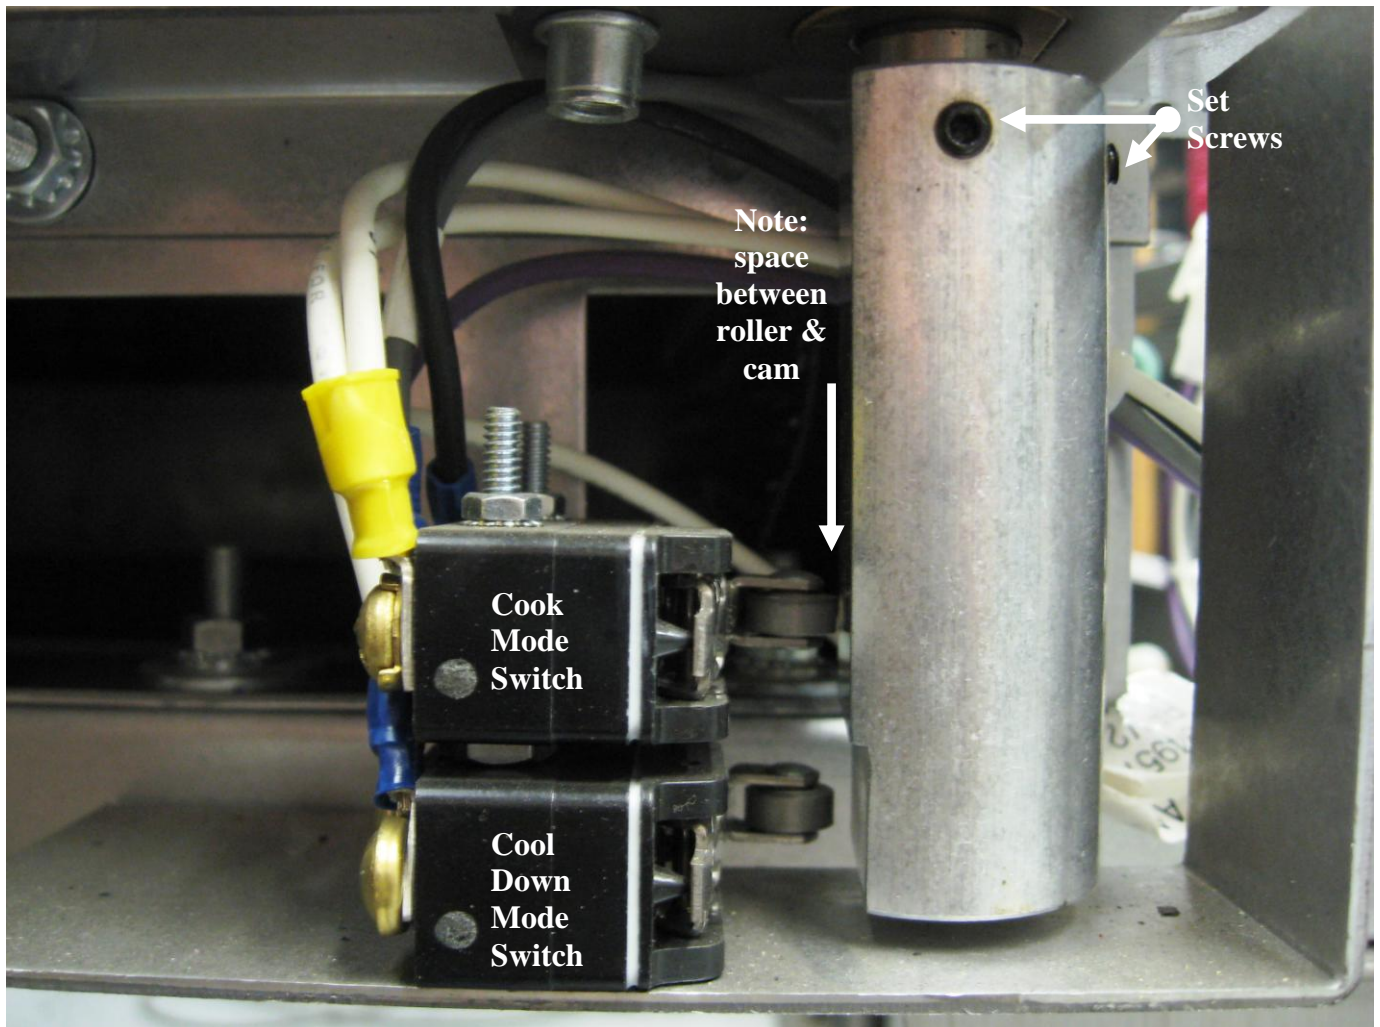

(200 Control door switches shown with doors closed)

The **200 Manual Controller** uses **22 amp door switches** and the part number is 4519715.



Digital Controllers (with a touch pad interface; **300 or 400 Series**) use **1 amp door switches** and the part number is 1855603.



## Current Door Switch Harnesses

