


## Fire Plate from Serial 0805100101613

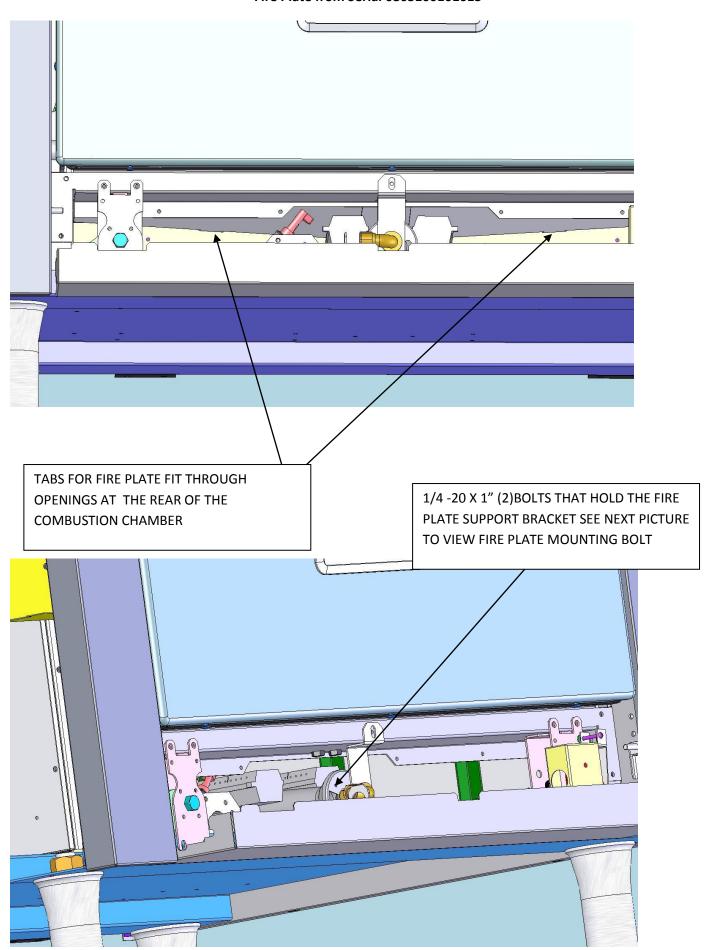

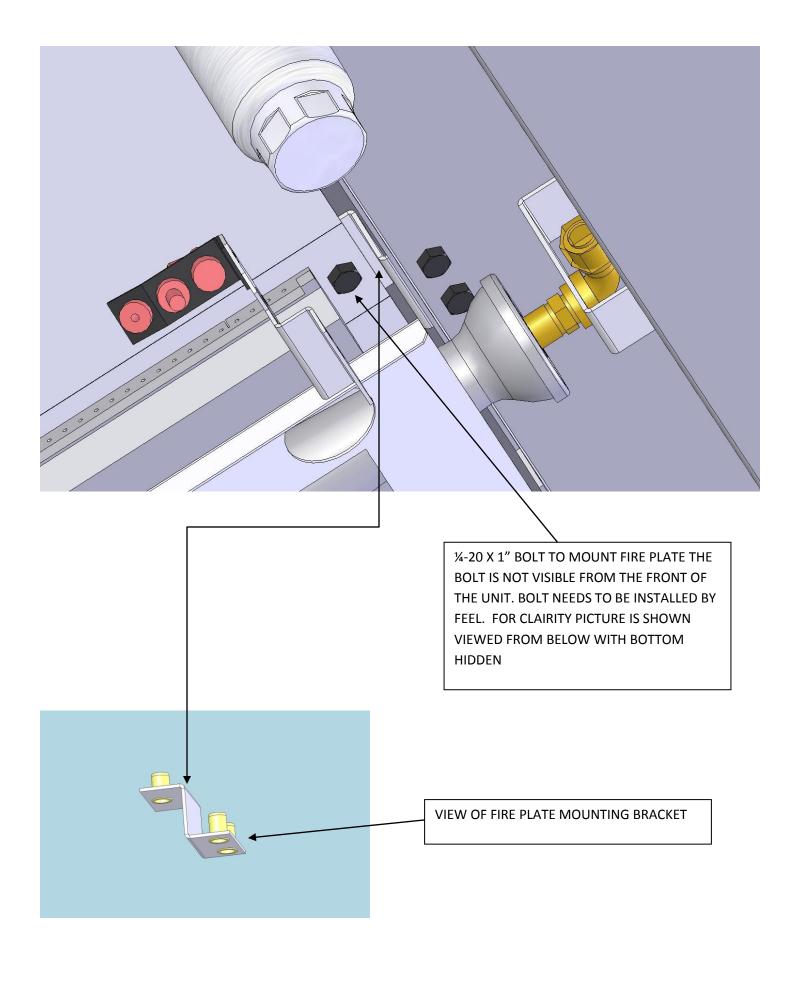

OVEN BURNER MAY NEED TO BE REMOVED TO ALLOW ROOM TO ATTACH FIRE PLATE. OVEN BURNER CAN BE REMOVED BY REMOVING ORIFICE BRACKET. THEN THE BURNER AND BURNER REST CAN BE PULLED OUT OF THE FRONT OF THE UNIT.

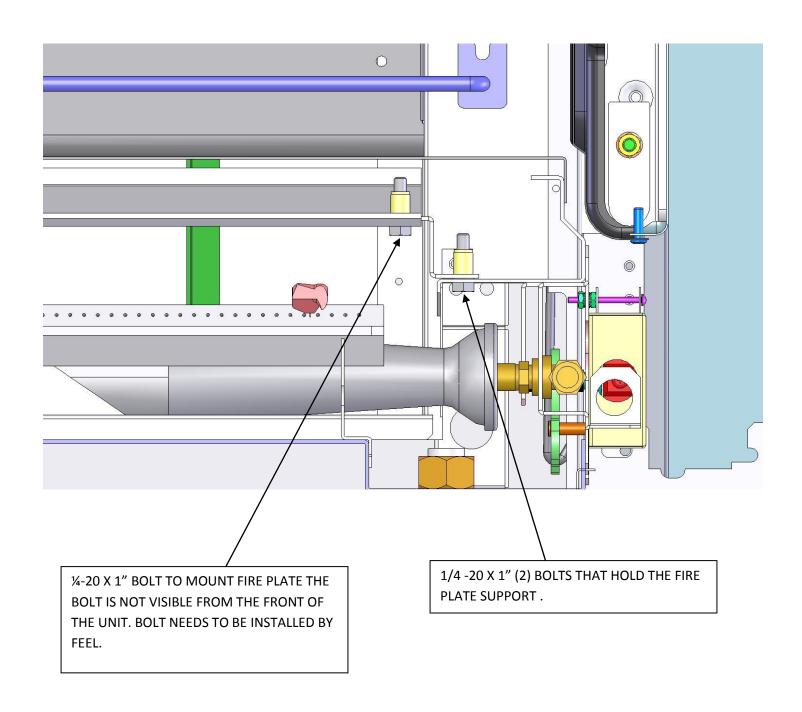

## Fire plate in RC Oven for New

Potential of right angle support was installed incorrectly. The images taken by looking in from the front of the unit in the burner chamber

Notice – the fasteners of the \_ support is visible in the image showing correct assembly





