




TOOLS NEEDED: pipe wrench, screwdrivers, (Robertson, Phillips)

PLEASE VERIFY THAT ALL PARTS ARE PRESENT BEFORE BEGINNING THE ASSEMBLY.

PART NO.	DESCRIPTION		QTY
1026704	3/4" 90 Degree Elbow		1
4525494	Nipple Assembly		1
4525493	Manifold Support Bracket		1
8003210	Self Tapping Screws	8-32x0.375" PH PAN HD T/C	4
000415	Polyethylene Bag (for screws)	5"x8"x0.002"	1
118002	Polyethylene Bag (for above)	11"x10"x0.002"	1

INSTALLATION INSTRUCTIONS:

1. Install the nipple assembly in the reduction elbow (3/4" NPT) connected to the manifold. (Figure A)
2. Install the manifold support bracket over the nipple and leave the two screws loose. (Figure B)
3. Adjust the manifold support bracket flush with the rear gas support bracket. (Figure C)
4. Tighten the two loose screws of the manifold support bracket onto the frame U-channel.
5. Lock the two brackets together using two screws. (Figure C)
6. 3/4" 90 degree elbow is supplied, to be installed if required.



Figure A

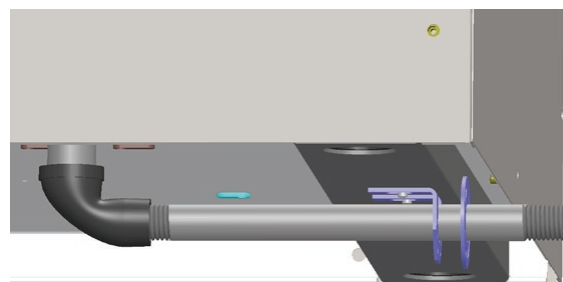


Figure B

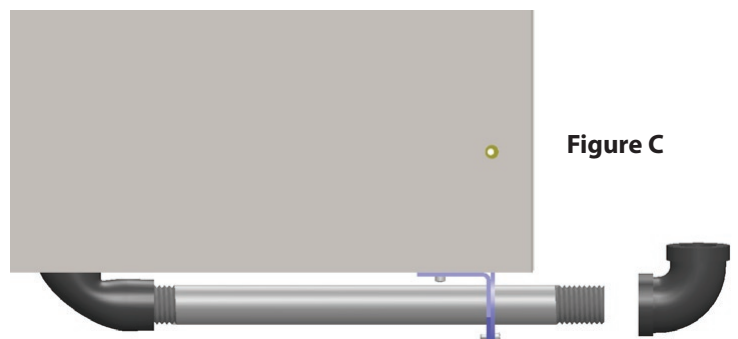


Figure C