


TOP VIEW

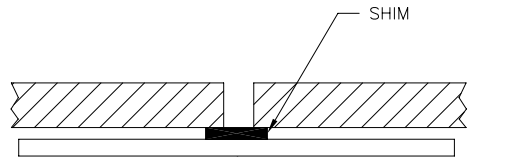

FRONT VIEW

NOTES: INSTALLATION INSTRUCTIONS FOR SHIMS

- 1 - TAKE SHIM FROM KIT AND PLACE ON THE TOP OF THE LOWER BAKE DECK TO FIND THE CORRECT SIZE. WHEN THE TOP OF THE SHIM IS FLUSH WITH THE HIGHER BAKE DECK, THIS IS THE CORRECT SIZE TO USE.
- 2 - PLACE A SCREWDRIVER OR A SIMILAR PRYING DEVICE BETWEEN THE TWO CORE PLATES AND LIFT THE LOWER PLATE UP. (BE CAREFUL NOT TO CHIP THE BAKE DECK.)
- 3 - PLACE THE SHIM HALF WAY UNDER THE FIRST DECK, AND THEN REPLACE THE DECK THAT WAS RAISED UP AS SHOWN IN THE DIAGRAM.
- 4 - REPEAT THE ABOVE STEPS FOR ANY OTHER CORNERS THAT NEED TO BE ADJUSTED.

SHIM CHECK LIST

THIS KIT CONTAINS (4) OF THE FOLLOWING SHIM PARTS:
 SHIM 0366 P/N 1954201
 SHIM 0456 P/N 1954202
 SHIM 0575 P/N 1954203
 SHIM 0781 P/N 1954204

*** CAD PRODUCED DRAWING - DO NOT REVISE MANUALLY ***
 © 2000 GARLAND COMMERCIAL INDUSTRIES
 THESE DRAWINGS AND SPECIFICATIONS ARE THE PROPERTY OF GARLAND COMMERCIAL INDUSTRIES
 AND SHALL NOT BE COPIED OR REPRODUCED WITHOUT THEIR WRITTEN PERMISSION.

| | | | | | | |
|-----|-----|--------------------|--------|-----------|-----|-----|
| 0 | - | RELEASED ITEM/S 1 | 00-109 | 9/14/2000 | RJK | RK |
| REV | SYM | CHANGE DESCRIPTION | ECO | DATE | DR | APP |

| | | | |
|---|-----------------------------------|---------------------|-----------|
| G A R L A N D A WELBILT Company | FREELAND PENNSYLVANIA 18224 | SCALE FACTOR N/A | SIZE B |
|---|-----------------------------------|---------------------|-----------|

TOLERANCE (EXCEPT AS NOTED)

FRACTIONAL ±1/64 DECIMAL ±.005 ANGULAR ±1'

| | | | | |
|--|-----------------------|-----------------------|---------|------|
| DESCRIPTION SHIM INSTALLATION GPD-48/60 | DATE | DR. BY | DR. CK. | APP. |
| | 9/14/00 | RJK | RK | RK |
| | MODEL(S) GPD-48/60 | FILE NAME 19542S05 | | |

| | | | |
|------|-------------|-----------------------------|-----|
| 2 | | | |
| 1 | 1954205 | SHIM INSTALLATION GPD-48/60 | 0 |
| ITEM | PART NUMBER | DESCRIPTION | REV |